
ITEM: 025101/025102

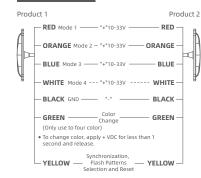

- . Connect YELLOW wires of all heads together for synchronization.
- To change flash patterns, apply + VDC for less than 1 second and release.
- · Flash patterns will be reset when YELLOW wires are connected to RED wire for more than 5 seconds.

A 10A fuse is required for connecting the positive terminal of the product to the battery.



Synchronous: Set the flash mode to be the same for Product 1 and Product 2. Alternating: After setting the flash mode to be the same for Product 1 and Product 2, then select one.

Set to alternating mode.

Priority: Mode 4 > Mode 3 > Mode 2 > Mode 1


Apply yellow wire to positive pole

Dual Color

Time	1s	2s	3s	4s	5s
Prompt	`ģ ×1	`ф′×2	`ģ′×3	`ф′×4	`ф′×5
Function	Flash Control	Color Control	Brightness	Alternating Flash	Selection and Reset
Order	1. Steady : : 14. Single-H/L	Color 1	≭ 100%		/
		Color 2	≭ 60%		/
		Color 1&2	X 40%	/	/

Four Color

Time	1s	3s	4s	5s
Prompt	`ģ′×1	'ģ′×3	`ģ′×4	`ģ′×5
Function	Flash Control	Brightness	Alternating Flash	Selection and Reset
Order	1. Steady : : 14. Single-H/L	¥ 100%		/
		≥ 60%		/
		X 40%	/	/

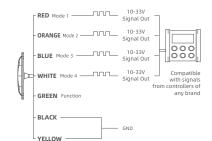



Installation and **Operation Instructions**

X6-PRO Ultra-thin LED Warning Lighthead



3.Flash Patterns

Priority: Mode 4 > Mode 3 > Mode 2 > Mode 1

1	Steady	8	Single
2	Random	9	Double
3	SAE Single	10	Quad
4	ECE R65 Single	11	Quint
5	ECE R65 Double	12	Ultra
6	ECE R65 Triple	13	Single-Quad
7	ECE R65 Quint	14	Single-H/L



911Signal Technology Inc.

www.911signal.com

B08X6PX10001 V1.0

Use to ITEM: 025101 025105 025106

SAE







025102

05

1.Specifications


ITEM	025101/025102	025105/025106		
Max Power	9W			
Voltage	10-33V			
Color	Dual/Quad	Signle/Dual		
LED	12/24	6/12		
Flash Patterns	14			
LENS	Flare			
Function	Working and Warning Light			
IP Rating	IP67			
Operating Temperature	-30°C to +70°C			
Mounting	Surface Mount, Bracket Mount			
Certification	SAE J595 Class1, CA T13, ECE R65 Class2, ECE R10			
Warranty	5-year			

2. Product Introduction


2.1 Mount

Bracket needs to be purchased separately

ITEM: 100237 A. Bracket

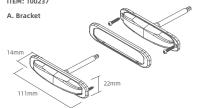


01

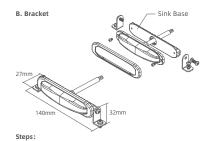


1. Secure the bracket to the product using screws and washers.

2. Use self-tapping screws to fix the product to the vehicle.

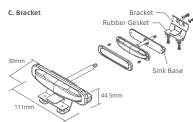

Steps:

- 1. Secure the heat sink base to the product and affix the product to the bracket.
- 2. Use screws to secure the assembly in place at the installation location.
- *Use plastic washers to prevent the screws from scratching the vehicle paint.

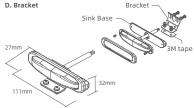


Steps:

- 1. Use 3M tape to pre-fix the bracket in place at the installation location.
- 2. Secure the bracket with self-tapping screws.
- 3. Use screws and washers to secure the product to the bracket.

2.2. Wiring Instructions

ITEM: 025105/025106

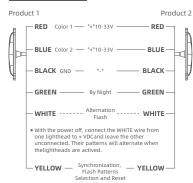

- · Connect YELLOW wires of all heads together for synchronization.
- . To change flash patterns, apply + VDC for less than 1 second and release.
- Flash patterns will be reset when YELLOW wires are connected to RED wire for more than 5 seconds.

A 10A fuse is required for connecting the positive terminal of the product to the battery.



02 03 04